
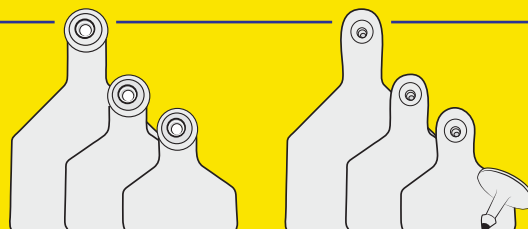


Z TAGS TWO PIECE TAGS & NLIS TAGS

KNOWING YOUR Z2 NO TEAR TAGGER™

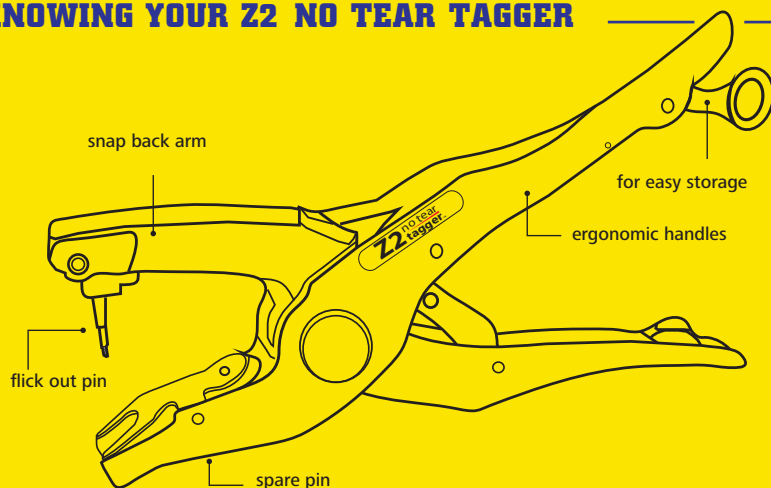

Two Piece Tags
Female Non-Tamperproof

Two Piece Tags
Male tags




NLIS tags
Breeder (white) and Post Breeder (Orange)

APPLYING Z TAGS TWO PIECE TAGS & NLIS TAGS


CORRECT TAGGING POSITION




1. Depress the metal clamp holder and place the female tag under the clamp.

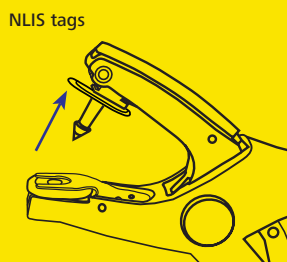

2. Push the male tag fully onto the tagger pin.

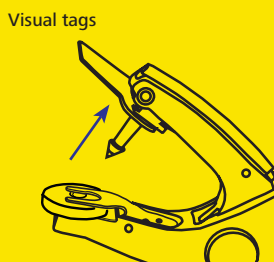


3. Position the tag between the two main cartilages, approximately halfway between the animal's head and the tip of the ear.

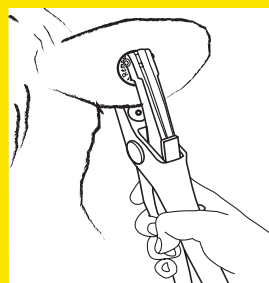


Male tag entering from the back of the animal's ear.

4. ALWAYS APPLY THE MALE TAG IN THE BACK (OUTSIDE) OF THE EAR.
Squeeze handles firmly and hold closed. When the tags have locked together, the tagger arm flicks back and releases the tag preventing ripped ears. To remove the tagger, pull straight down from animal's ear in one smooth motion - no need to open the handles.


INCORRECT TAGGING POSITION

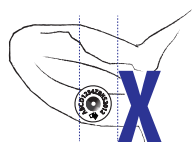

Incorrect

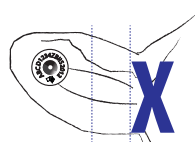

Incorrect

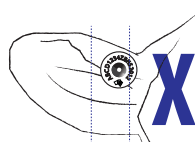

Incorrect

1300 594 696
info@zeetags.com.au
www.ztags.com

© Datamars 2020